

Desiccant replacement for Atik 3 series and Titan cameras.

Please work in a low dust area and take anti static precautions.


Place the camera face down on a clean work surface and remove the four small cross head screws holding the back cover on.



Locate the silver or black plug of the desiccant chamber and remove by unscrewing anti clockwise. You may need to use pliers to assist with this.



Once removed the desiccant tablet is visible, invert the camera carefully and allow the tablet to fall out.

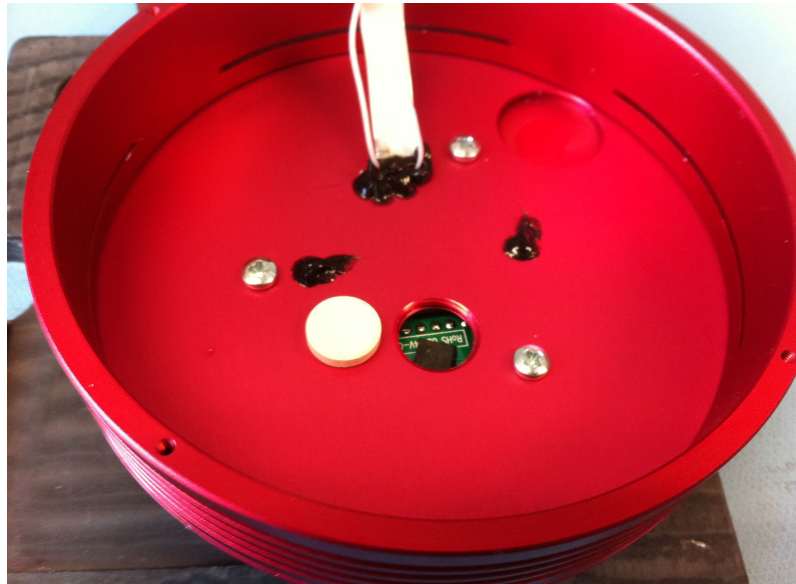

Once removed the tablet can be replaced with new or baked in an oven at 200 degrees Celsius for around 60 to 90 minutes, this will regenerate the tablet.

Re assembly is the reverse procedure. Please wait 24 hours before cooling the camera to allow the desiccant to dry the chamber out.

Any problems or queries email us at support@atik-cameras.com